HEATSTORE

**Island Park, Bristow Broadway, Bristol, England, BS11 9FB**
**Telephone: 0117 923 5375 Fax: 0117 923 5374**

**INSTALLATION INSTRUCTIONS FOR**

# REMOTE CONTROL UNIT

**Part Number HSRCU1**

## Controller HSRCU1

The remote control switch is for use with the HSAC 4500, 4.5 kW Air Curtain Heater, and the HSAC 6000, 6 kW Air Curtain Heater.
The unit comprises of one 20A double pole and two 20A single pole switches in a surface mounting box, 166mm x 86mm x 40mm deep.
The unit is supplied wired for use as shown below. The internal wiring of the heater must be modified before connection between the remote control and heater are made.

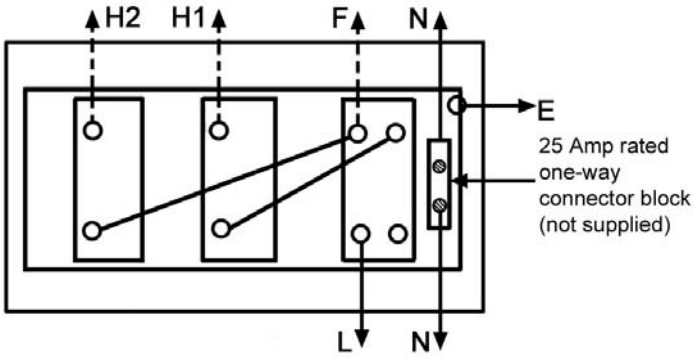


All wiring connected to the heater switches and 3-way terminal block should be removed and connections between the 4-way terminal block and the remote switch made as shown below. The neutral is not switched. A suitable double pole isolation switch should be incorporated in the circuit.

For safety reasons, a sound earth connection must always be made to the unit before use.

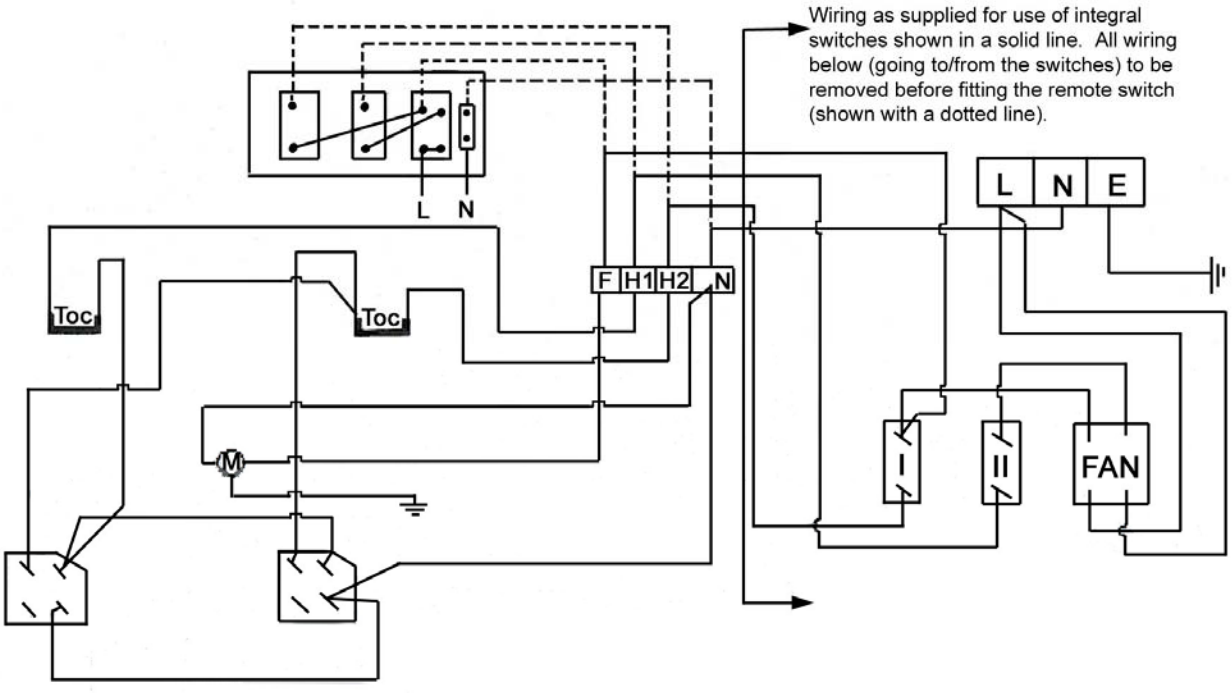


Wiring diagram for HSAC 6000